


**XLF-3
Parts and Assembly**

L.L. Electronics
103 N. Prairieview Rd.
P.O. Box 420
Mahomet, IL 61853-0420
(217) 586-5327

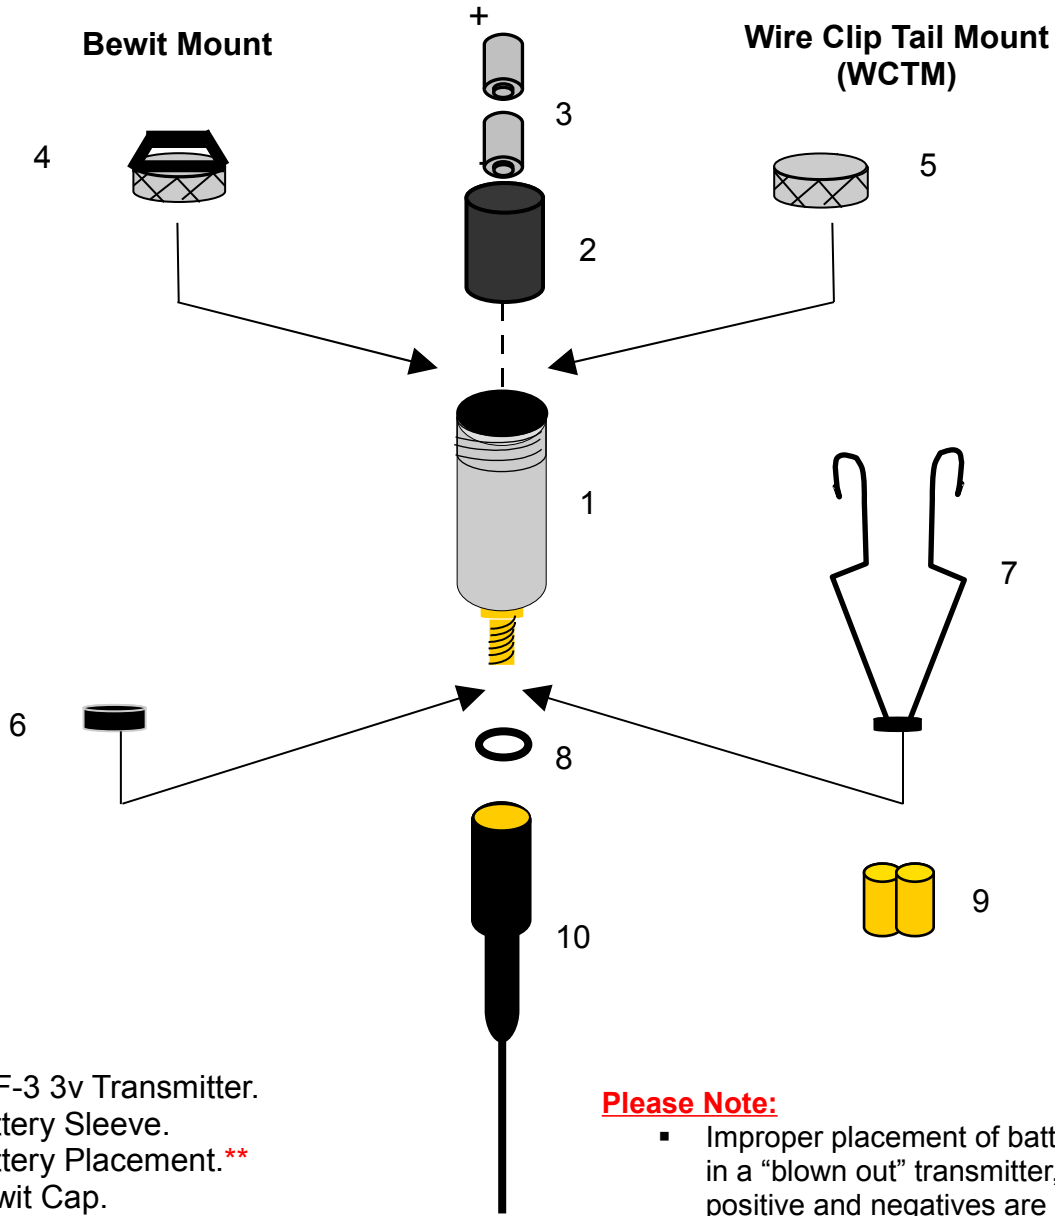

1. XLF-3 3v Transmitter.
2. Battery Sleeve.
3. Battery Placement.**
4. Bewit Cap.
5. Flat Cap.
6. Washer.
7. Wire Clip Tail Mount with Snap Ring.
8. Antenna Compression O-ring.
9. Tube Assembly.
10. Screw-Type Antenna.

Please Note:

- Improper placement of batteries will result in a "blown out" transmitter, so be sure the positive and negatives are in the appropriate positions.
- Use **only** high-drain silver oxide batteries, do **not** use *Varta* or *Renata* brand batteries, they are low drain.
- You must use only L.L. Electronics manufactured Wire Clip Tail Mounts and Tube Assemblies together. Use of other manufactures' products could result in loss or damage. L.L. Electronics assumes no responsibility in the inability of compatible parts to function properly.

****Use two (2) 392 Silver Oxide Batteries; for the XLF-3 4.5volt, use three (3) 396 Silver Oxide Batteries.**

3
be
tures'
1 the
erly.